









HEATING FUNCTIONS

| Heating function | Application |
|---|--|
|  Off position | The oven is off. |
|  Light | To turn on the lamp. |
|  True Fan Cooking | To bake on up to three shelf positions at the same time and to dry food. |
|  Moist Fan Baking | This function is designed to save energy during cooking. When you use this function, the temperature in the cavity may differ from the set temperature. The heating power may be reduced. For more information refer to "Daily Use" chapter, Notes on: Moist Fan Baking. |
|  Defrost | To defrost food (vegetables and fruit). The defrosting time depends on the amount and size of the frozen food. |

| Heating function | Application |
|---|---|
|  Grill | To grill thin pieces of food and to toast bread. |
|  Fast Grilling | To grill thin pieces of food in large quantities and to toast bread. |
|  Turbo Grilling | To roast large meat joints or poultry with bones on one shelf position. To make gratins and to brown. |

NOTES ON: MOIST FAN BAKING




This function was used to comply with the energy efficiency class and ecodesign requirements according to EU 65/2014 and EU 66/2014. Tests according to EN 60350-1.

The oven door should be closed during cooking so that the function is not interrupted and the oven operates with the highest energy efficiency possible.

For the cooking instructions refer to "Hints and tips" chapter, Moist Fan Baking. For general energy saving recommendations refer to "Energy Efficiency" chapter, Energy Saving.

CLOCK FUNCTIONS

CLOCK FUNCTIONS

| Clock function | Application |
|--|---|
|  Time of Day | To set, change or check the time of day. |
|  Duration | To set how long the oven works. |
|  Minute Minder | To set a countdown. This function has no effect on the operation of the oven. You can set this function at any time, also when the oven is off. |